INSTALLATION INSTRUCTIONS

MARLOW®

Step 1. Check Package Contents

Mounting hardware kit includes the following:

Parts		Quantity
a. Mounting brackets		2 x 60-110CM ; 3x 120-180CM; 4x 210CM
b. Screws		5x 60-110CM ; 7x 120-180CM; 9x 210CM
c. Wall anchors		5x 60-110CM ; 7x 120-180CM; 9x 210CM
d. Cord guide		1x

Step 2. Tools Required

pencil tape measure level screwdriver step stool drill

Step 3. Installation

Your blind may be installed either inside the window frame or outside the window frame.

1. Decide where to hang the shade and install the brackets.

A: Inside the frame of the window

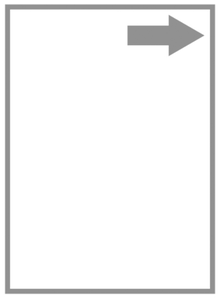

B: On the frame of the window

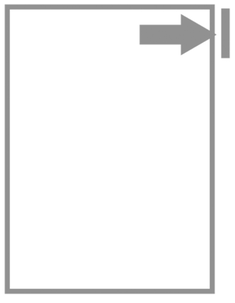

C: On the ceiling

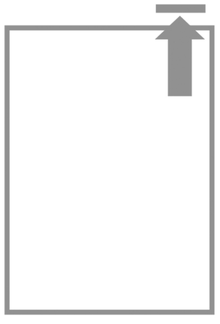

2. Install the shade on the brackets

a.

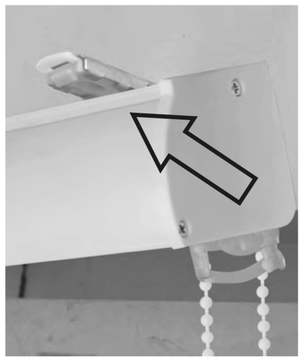

b.

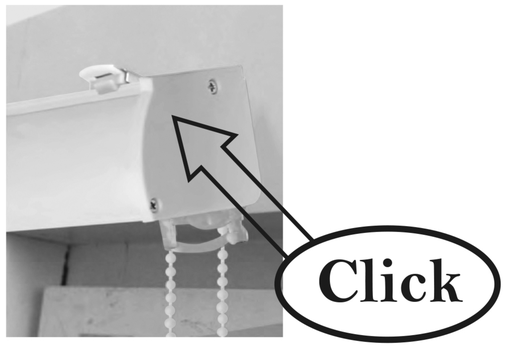

3. Install the safety device

The safety device is already attached to the chain. DO NOT REMOVE. The tension device reduce the hazards of strangulation of young children or pets as well as limiting the access to the chain.

WARNING: A chain/cord tension device is required to be fixed to a wall or window frame to reduce the chance of strangulation of young children.

a) Position the cord tension device on the solid timber/aluminium window frame or stud behind plaster board wall, that allows the ball chain to move easily through the tension device. Ensure the ball chain is entirely lowered, stretched and tangle free and operates smoothly.

b) Mark the hole with a pencil. Pre drill hole with a smaller drill bit, then secure the tension device with the screws provided (as seen in diagram below). Note: use the masonry plugs if drilling into brick or concrete walls.

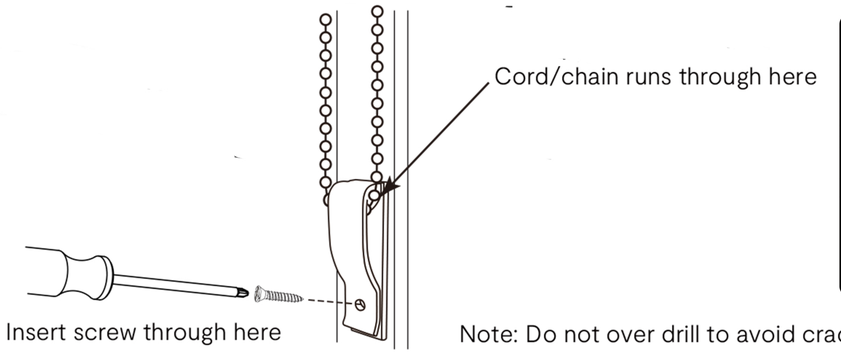

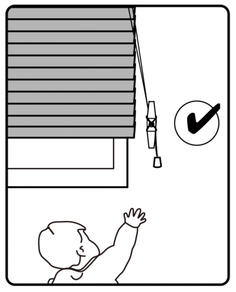

Note: Do not over drill to avoid cracking the plastic.

WARNING: To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer, at a height of less than 1600mm above floor level;

SUGGESTIONS FOR INSTALLING CORDED INTERNAL WINDOW COVERINGS:

i) A cord guide may be installed lower than 1600mm above floor level if the ***cord** is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed; and

ii) If a cord guide is installed lower than 1600mm above floor level it must be designed to prevent a child from being able to remove the cord; and

ii) If a ***cleat** is used to secure the cord it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat.

***cord:** rope, strap, string, chain, line or wire used to manipulate a corded internal window covering.

***cleat:** a device having a bar with arms around which a cord can be wound and that can be attached to a wall or other structure.

⚠WARNING

WARNING: CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS.