FILE-MDF-40-CAB

Details of parts: (unit CM)

Note: two kinds of eccentric screw randomly distribution 						
A Eccentric screw *12	B Eccentric nut *12	C Pointed screw *36	D Handle screw *8	E Handle *4	F Metal pin *8	G Small self-tapping screw *24

H Iron sheet *4	I Key lock *4	J Thin nail *10			

Warm Reminder:

1. When installing please distinguish the plates according to the drawings.
2. When installing, the screws are tightened to seven points first, and then tightened after all the alignment is completed.
3. Some panels have a red face, red face down or in.
4. The color of the product shall prevail, the instructions is for reference only.

Eccentric installation principle: (Only the installation principle diagram, please refer to the actual eccentric screw for the actual installation)

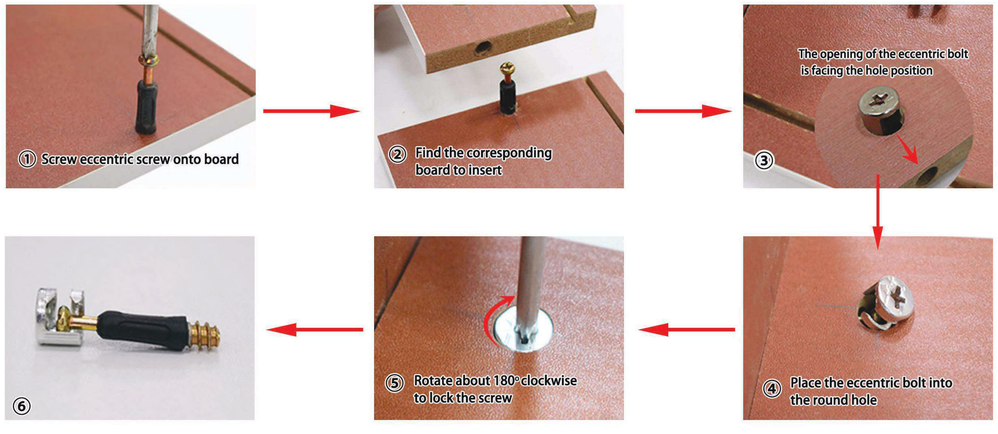

Plate Name and Serial Number

				Note: The bottom plate of the drawer is a thin plywood 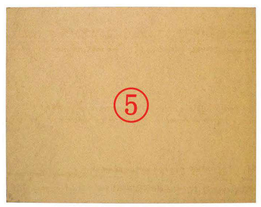	Note: The holes on the cover are all through	Note: This hole is not a through hole
Drawer left panel *4	Drawer panel *4	Drawer right panel *4	Drawer back panel *4	Drawer Botton Plate *4	Cabinet Cover Plate	Laminate *3

		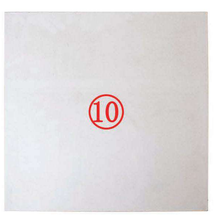		Note: The back plate is a thin plywood	**Warm Reminder:** 1: Through Hole: refers to the hole that penetrates the board. 2: Non-Through Hole: the holes does not penetrate the board. 3: When installing, please distinguish the plate according to the installation drawing and check also the plate.
Left Standing Plate	Right Standing Plate	Cabinet Base	Decorative Panel	Back Plate	

Start Installation: The drawer installation steps are as follows

(1) Preparation for Drawer Installation

(2) Screw in 2 eccentric screws on drawer panel



Eccenter Thread A*2

(3) Insert the left and right side panels of the drawer into the panel eccentric screw, insert 2 eccentric nuts and tighten them.

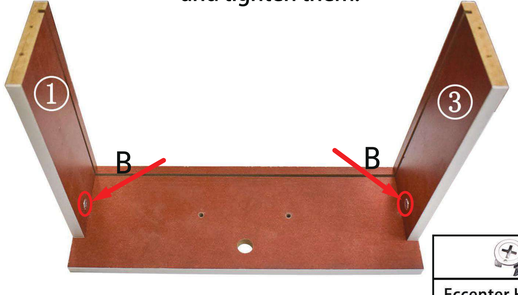

Eccenter Hat B*2

(4) Insert the drawer base plate along the card slot

FILE-MDF-40-CAB-2

(5) Use 4 pointed screws to connect the back panel of the drawer to the left and right vertical panels of the drawer and fix it

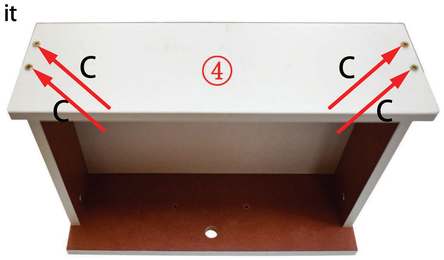

Pointed screw C*4

(6) Use 4 small self-tapping screws to fix the key lock on the drawer panel

Note: The hole for fixing the key lock has to be punched by yourself

Key lock I*1

Small self-tapping screws G*4

(7) Use 2 handle screws to fix the handle to the drawer panel, and then install the remaining 3 drawers in accordance with the steps.

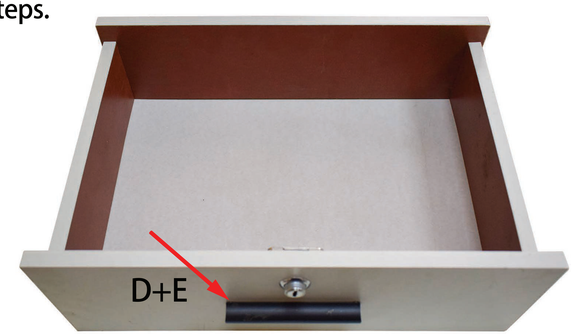

Handle screw D*2

Handle E*1

The installation steps of the drawer lock are as follows:

Note: The board in the picture is for demonstration only, and the color of the specific board is subject to receipt

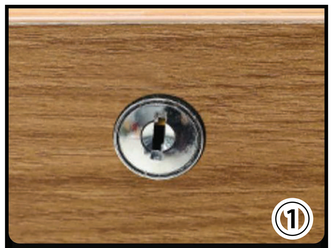

Pass the lock body through the hole

When installing, the latch is upward

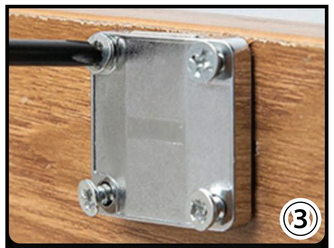

Fix the lock with 4 small self-tapping screws

Install snap ring

Installation complete

The installation steps of the file cabinet are as follows:

1. Use 2 small self-tapping screws to fix the drawer iron sheet to the cabinet cover

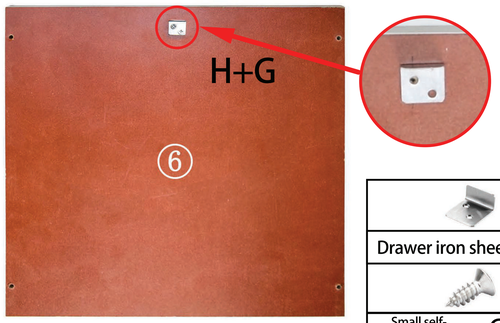

Drawer iron sheet H*1

Small self-tapping screws G*2

2. Screw 4 eccentric screws behind the cabinet cover

Note: Two kinds of eccentric screws are distributed randomly

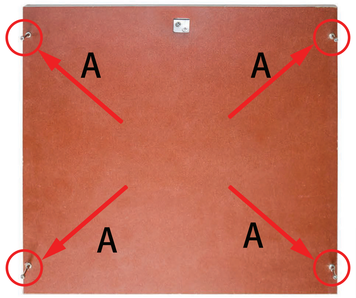

Eccentric screw A*4

3. Insert the hole of the left vertical plate into the eccentric screw of the cabinet cover plate, and insert 2 eccentric nuts to fix the left vertical plate.

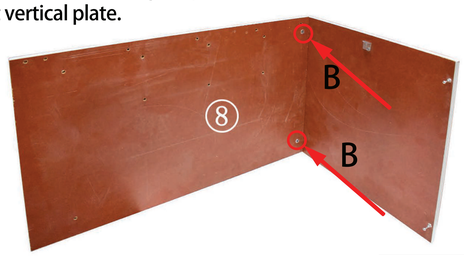

Eccentric nut B*2

4. Use 2 small self-tapping screws to fix the drawer iron sheet on the laminate

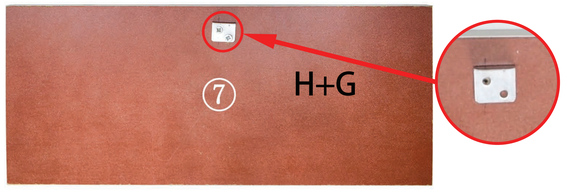

Drawer iron sheet H*1

Small self-tapping screws G*2

5. Repeat the previous step and press the remaining two layers on the drawer iron sheet, a total of three

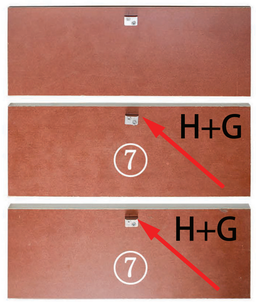

Drawer iron sheet H*2

Small self-tapping screws G*4

6. Use 2 pointed screws to connect 1 installed laminate to the left vertical plate and fix it

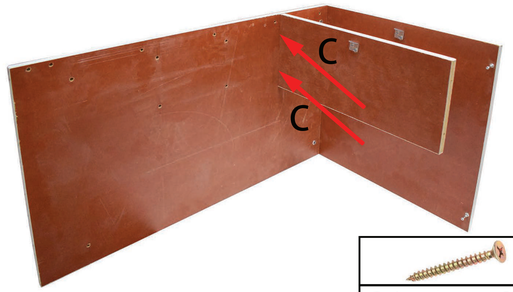

Pointed screw C*2

7. Repeat the previous step and fix the second installed laminate

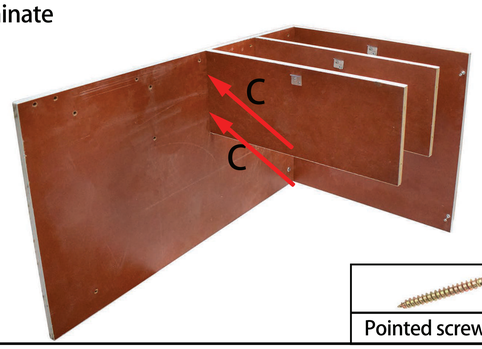

Pointed screw C*2

8. Repeat the previous step and fix the third installed laminate

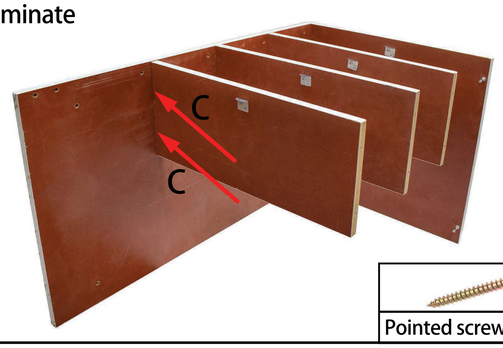

Pointed screw C*2

FILE-MDF-40-CAB-3

9. Use 2 pointed screws to connect the bottom plate of the cabinet to the left vertical plate and fix it

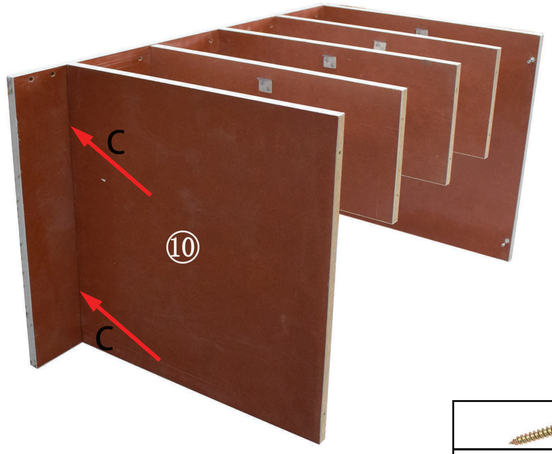

Pointed screw C*2

10. Use 2 pointed screws to connect the decorative panel to the left vertical plate and fix it

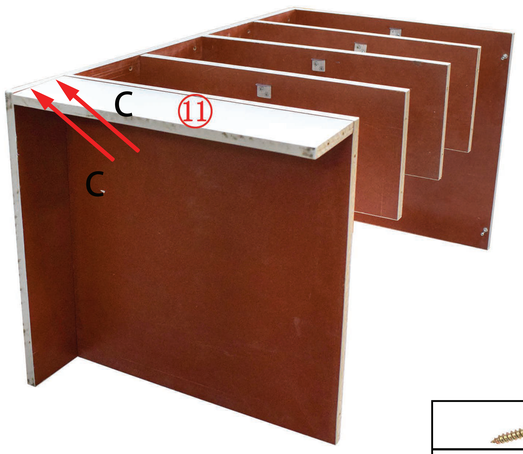

Pointed screw C*2

11. Insert the hole of the right vertical plate into the eccentric screw of the cabinet cover plate, insert 2 eccentric screw caps to fix the right vertical plate, and use 10 pointed screws to connect the right vertical plate to other boards and fix it.

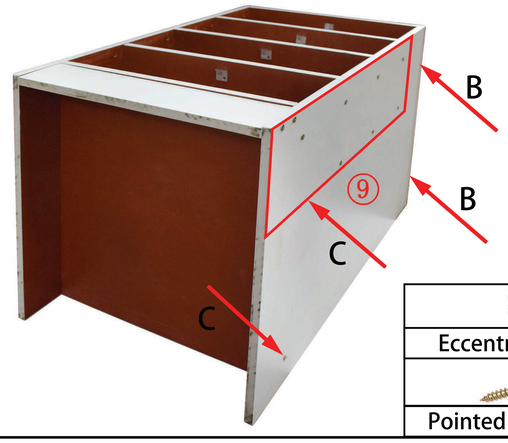

Eccentric nut B*2

Pointed screw C*10

12. Fix the back panel to the frame with fine nails

Front

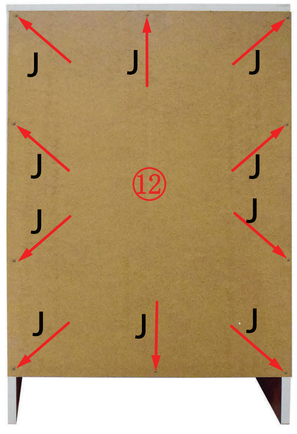

Back

Thin nails J*10

13. Insert the metal pin in the position below

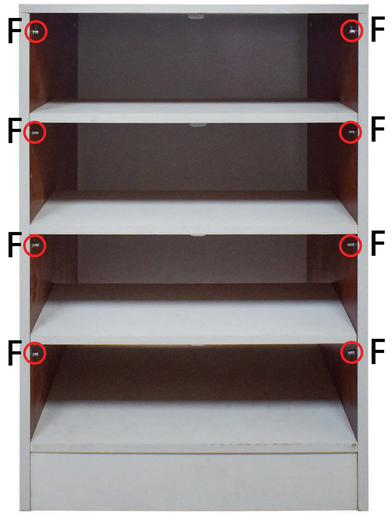

Metal pin F*8

14. Plug in the installed drawer and the installation is complete