Start the installation: Step 1: The drawer installation steps are as follows (there are three drawers in total, the same installation steps for drawers without locks, no need to install locks)

FILE-MDF-CAB-WHT-03-2

(1) Buckle installation preparation

(2) Use 4 pointed screws to fix the left and right side panels of the drawer to the drawer back panel

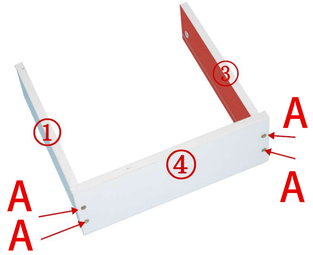

(3) Insert the drawer bottom plate into the card slot

(4) Install eccentric screws in the holes on both sides of the drawer panel, and screw in 4 small screws at the key lock position.

Screw on the eccentric screws in the two holes on the drawer panel

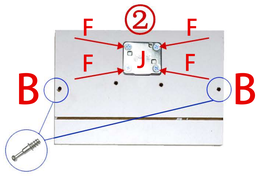

(5) Insert the installed drawer panel into the holes on the left and right side panels and tighten the eccentric nuts

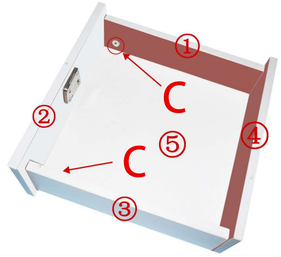

(6) Screw the handle screw into the hole below and tighten the handle.

Drawer installation completed

Step 2: Cabinet installation steps are as follows

1. Take out the cover, screw 6 eccentric screws on the red side, and then use self-tapping screws to fix the two iron pieces (the tilted side of the iron piece is toward the outside)

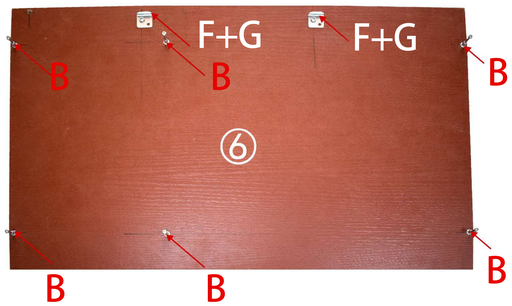

Eccentric screw B*6	Self tapping screw F*2	Iron plate G*2

2. Install the right vertical plate and the middle plate on the cover plate, put the eccentric nut on the side and tighten it.

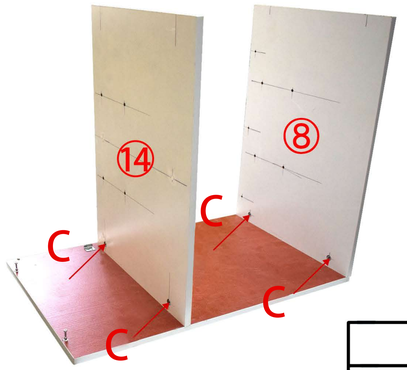

Eccentric nut C*4

3. Install the two right cabinet partition boards between the two vertical boards and tighten them with pointed screws on both sides.

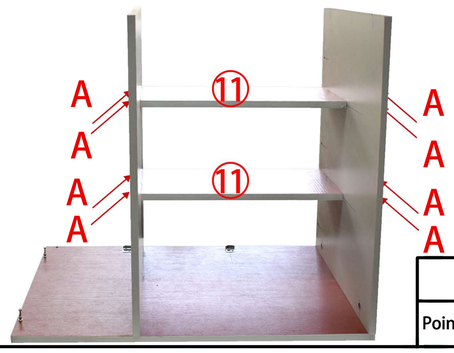

Pointed screw A*8

4. Install the left vertical plate on the cover plate, put the eccentric nut on the side and tighten.

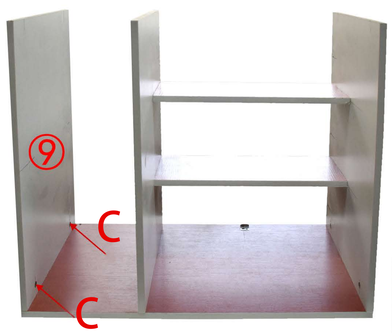

Eccentric nut C*2

5. Take out the base plate, install the four wheels on the red side, and tighten them with self-tapping screws.

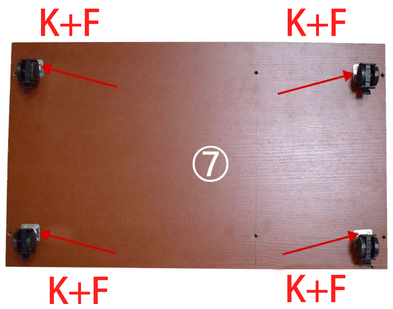

Universal wheel K*4
Self tapping screw F*16

6. Fix the bottom plate and vertical plate with the wheels installed, and tighten them with pointed screws.

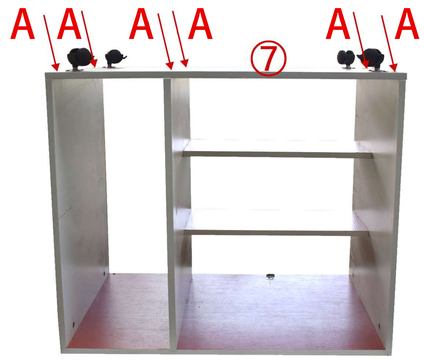

Pointed screw A*6

7. Then install the two back panels behind the cabinet and nail them tightly with small nails.

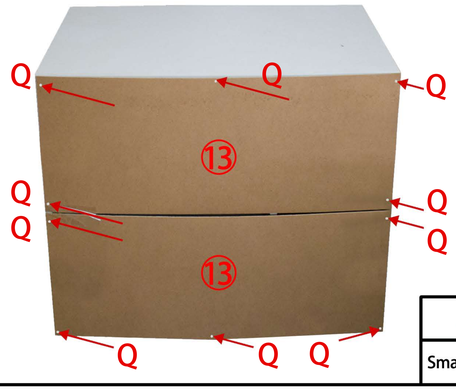

Small nails Q*10

8. Take out the door panel, fix the handle with the handle screw, then install the key lock, inserting the metal pin on one side and the spring pin on the other side.

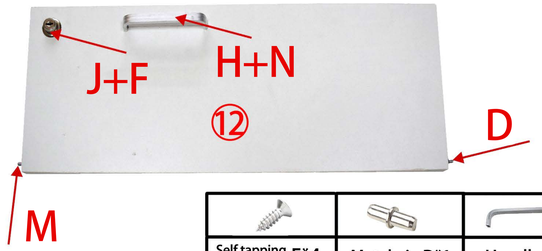

Self tapping screw F*4	Metal pin D*1	Handle H*1
Spring pin M*1	Key lock J*1	Handle screw N*2

9. After installing the door, plug the metal pin into the hole marked on the right.

Metal pin D*6

10. Finally, put the drawer in place to complete the installation.

Completed installation