# HIGOLD®
## AUSTRALIA

450mm

Min 530mm

385mm

| Frame and Bins | Base Plate | Slide | Door fitting |
|---|---|---|---|
| ❶ | ❷ | ③a ③b | ❹ x2 |
| Template for slide | Template for door fitting | Screws | Spare plastic fitting |
| ❺ | ❻ | ❼ x20 | ❽ |

---

**❶** Drill holes (12 x ⌀2.5mm) on the cabinet floor using the drilling template for sliders.



Align
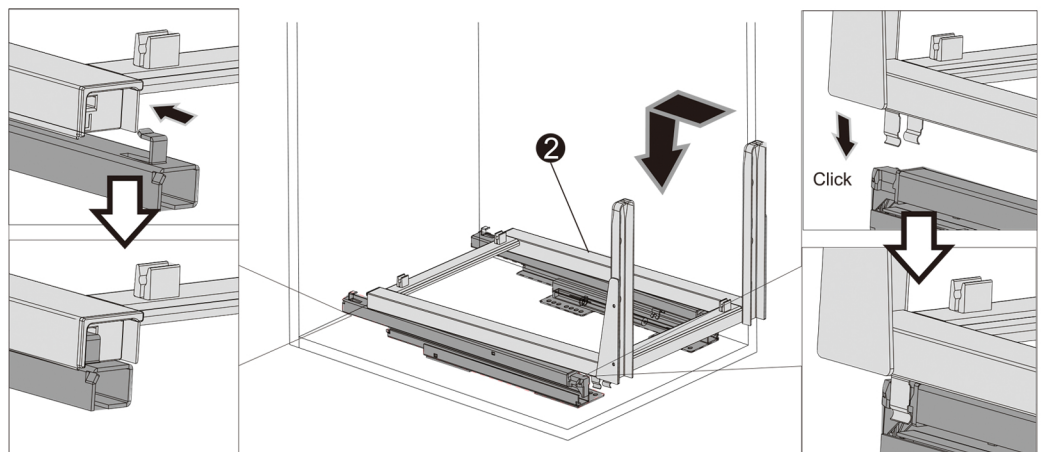
Align

❺

For left slider

For right slider
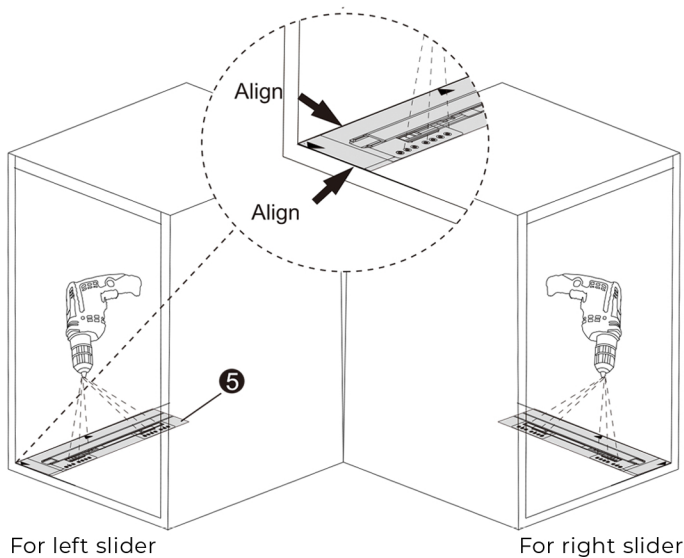
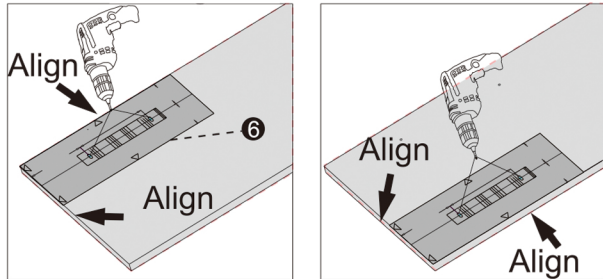**❷** Install the sliders and affix onto the cabinet floor using 12x screws.



3a
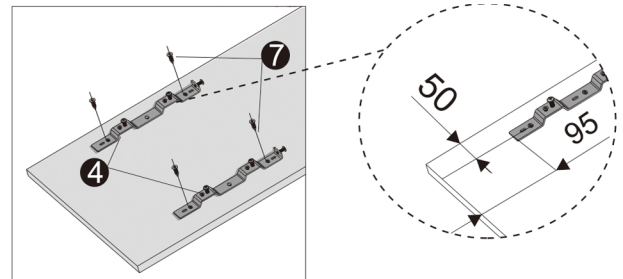
❼

3b

---
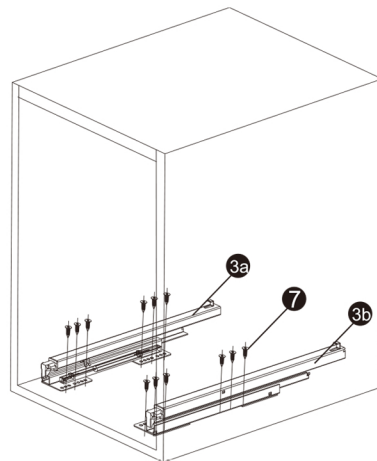
**❸** Install the base plate on the sliders.

3.1. Insert the hooks located at the back part of the sliders.

3.2. Push the front part of the base plate until the connecting brackets "click".



❷

Click

**4** Drill holes (4 x ⌀2.5mm) on the door panel using the drilling template for door fittings.



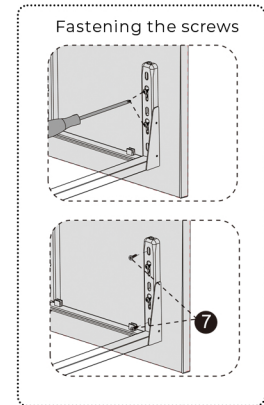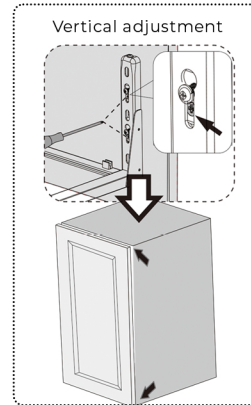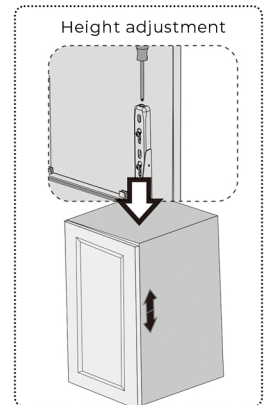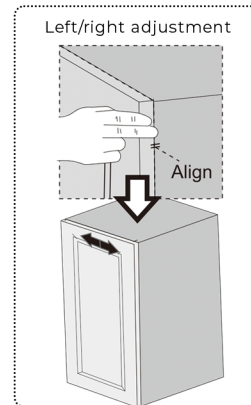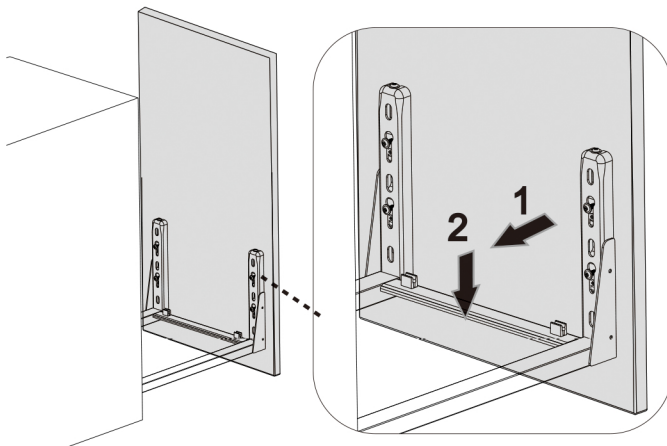**5** Install the door fittings and affix onto the door panel using 4x screws.



**6** Pre-affix the base plate to the door panel.

Align the door to the cabinet by adjusting it on both sides, the height, and vertically before fastening the screws.



Left/right adjustment

Height adjustment

Vertical adjustment

Fastening the screws

**7** Install the frame and bin unit onto the base plate using the plastic fitting.



Click