
1

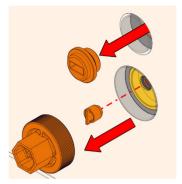

Remove Test Caps with a flat head screwdriver or spanner.


Ensure that no Test Plugs are in Body.


3 Fasten Diverter to in-wall body using a tube spanner. Install Diverter Button and fasten Grub Screws.


Fit Plastic Spacer into Position.

Hand Tighten Diverter Sleeve.










2

Add grease or soap to Cartridge Legs. Push Cartridge gently Into Body. Ensure correct orientation.

Cartridge only fits in one orientation.

Firmly fasten Cartridge Sleeve to Mixer Body using a shifting spanner.


Gently push Dress Plate over assembly.

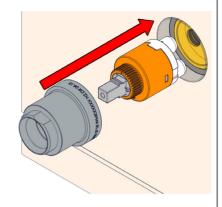

5

Attach Handle to Mixer Assembly. Fasten Grub Screw firmly with allen key supplied.

Insert Screw Cap and press firmly in place.

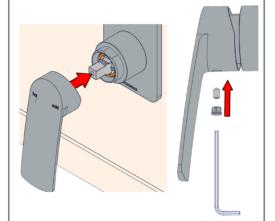

CARTRIDGE REPLACEMENT

Removing Diverter:

- a) Remove the Dress Plate
- b) Remove the diverter Sleeve
- c) Remove the plastic spacer
- d) Release grub screws
- e) Remove the diverter button
- f) Release the screw. Remove the adaptor
- g) Remove the diverter cartridge

Installing Diverter:

- a) Install the diverter shroud with a 27mm tube spanner.
- b) Push the dress plate back to position.
- c) Fasten grub screws and fit the plastic spacer to position.
- d) Fasten the screw to secure Spindle Adaptor on the spindle.
- e) Turn spindle Anti-Clockwise until it stops.
- f) Push on Diverter Button.
- g) Fasten New Diverter Cartridge with the tube spanner.

