



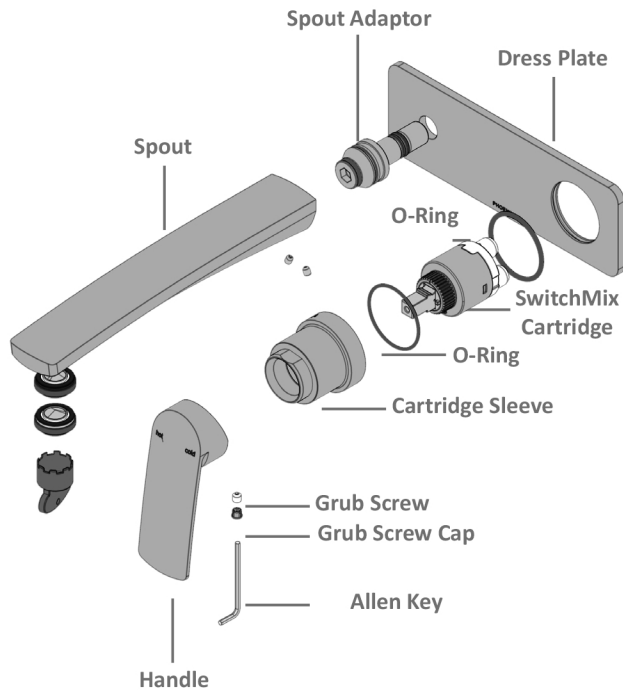


1

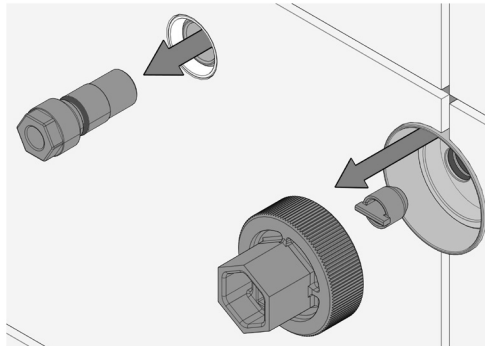

Remove Test Caps with a flat head screwdriver or spanner.

Ensure that no Test Plugs are in Body.


2

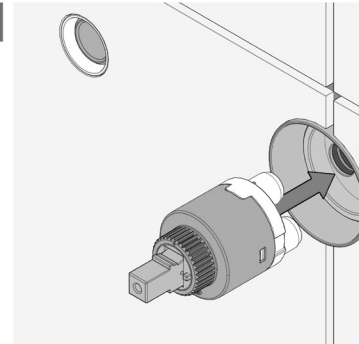

Add grease or soap to Cartridge Legs. Push Cartridge gently Into Body. Ensure correct orientation.


Cartridge only fits in one orientation.

3

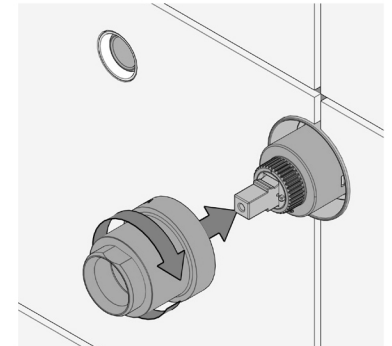


Firmly fasten Cartridge Sleeve to Mixer Body using a shifting spanner.

4

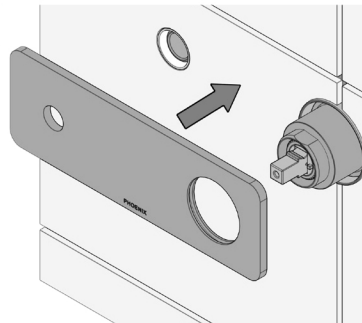

Gently push Dress Plate over Wall Mixer Sleeve.


5

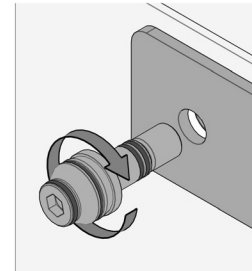

Align outlet hole in wall with outlet hole in Dress Plate.


Fasten Spout Adaptor through Dress Plate onto in-wall Mixer Body.

6

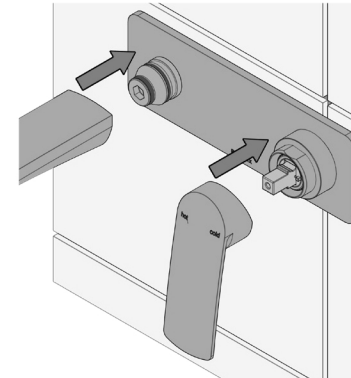

Push on Spout and Handle as shown.

7

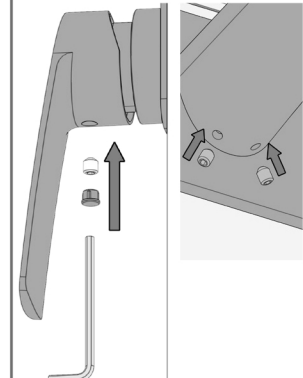

Fasten grub screws firmly.

recommended working pressure

150-500KPa

maximum hot water temperature

75 degrees