



1

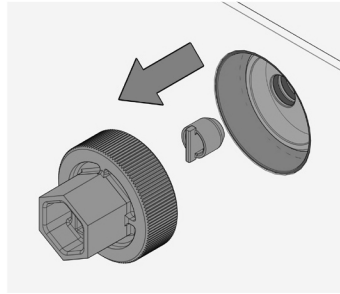

Remove Test Cap using a Flat Head Screw Driver or spanner.

Ensure that no Test Plugs are in Body

2

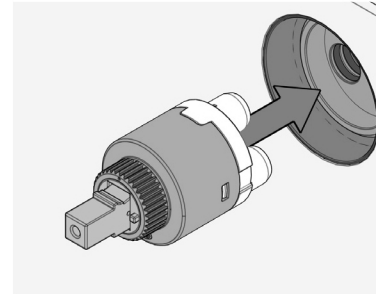


Add Grease or Soap to the three Cartridge legs.

Push Cartridge Gently Into Body


Ensure Correct Orientation. Cartridge Only Fits in One Orientation.

3

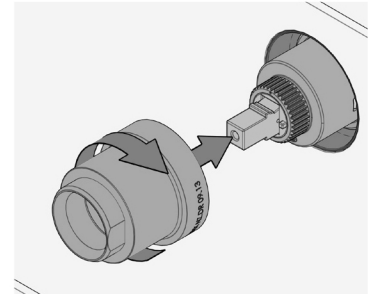


Firmly fasten Cartridge Sleeve to Mixer Body using a shifting spanner.

4

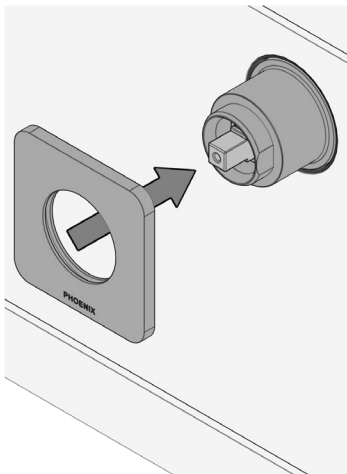


Push Dress Plate over Cartridge Locknut

5

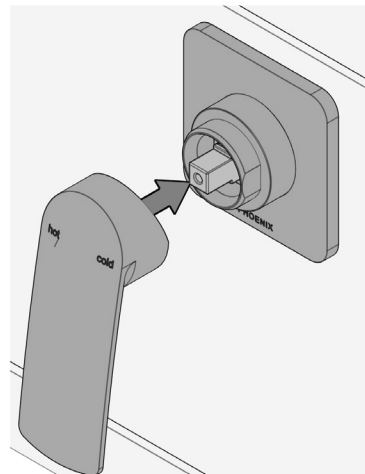

Push Handle onto Cartridge.

6

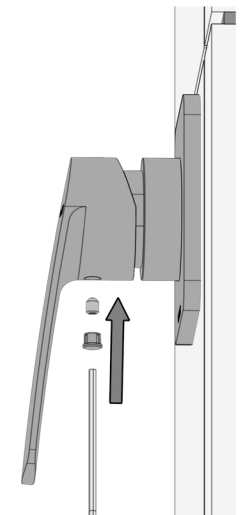

Tighten Grub Screw and push in Cap to secure handle.