
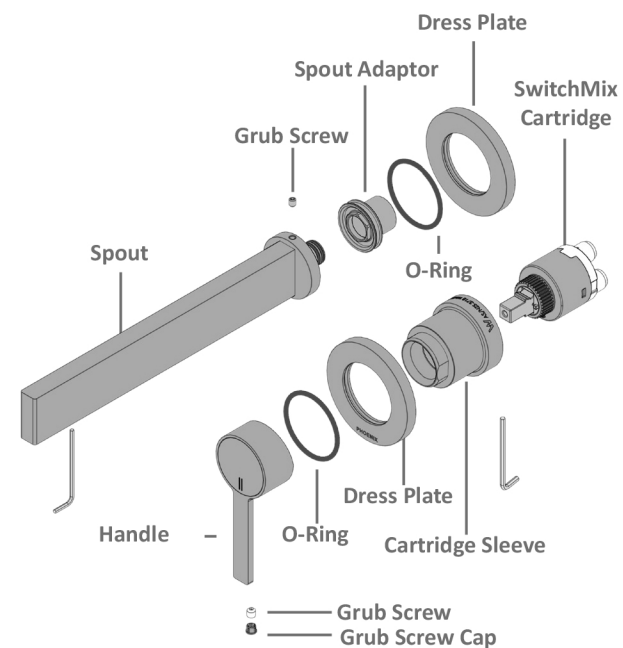


1

Remove Test Caps with a flat head screwdriver or spanner.


Ensure that no Test Plugs are in Body.

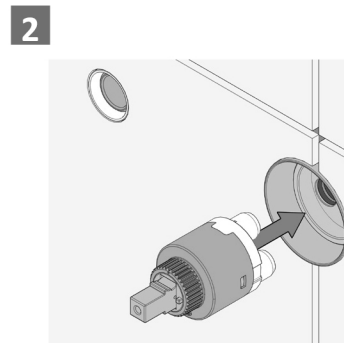

2

Add grease or soap to Cartridge Legs. Push Cartridge gently Into Body. Ensure correct orientation.


Cartridge only fits in one orientation.

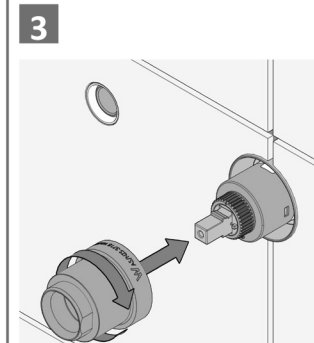

3


Fasten Cartridge Sleeve to Mixer Body using a shifting spanner.

Do not over tighten.

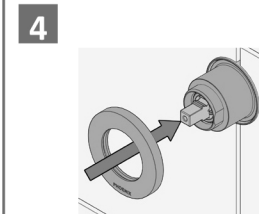


4

Gently push Dress Plate over Wall Mixer Sleeve.

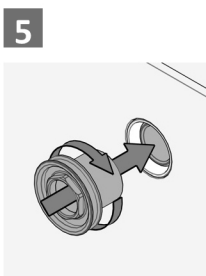


5

Fasten Spout Adaptor.

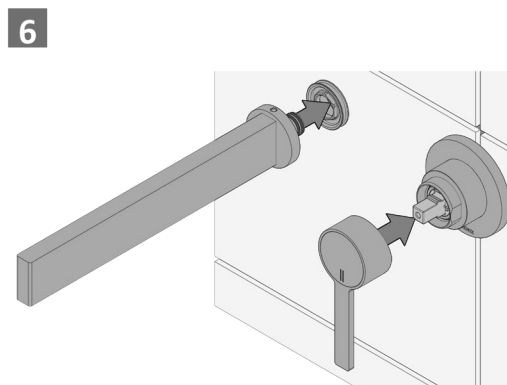

6


Push on Spout and Handle as shown.

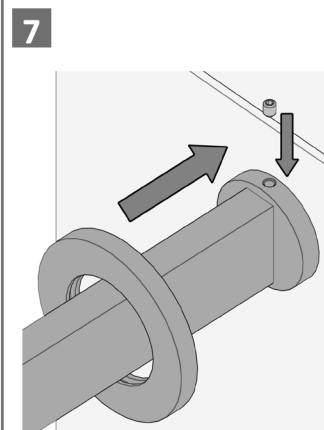

7


Tighten Grub Screw securing spout to adaptor.

Gently push Dress Plate over Spout.

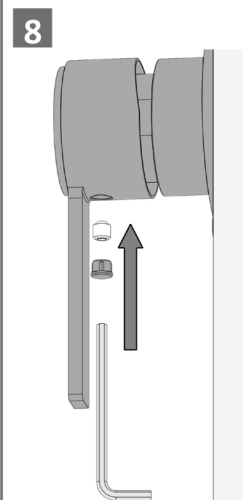

8

Fasten grub screws firmly.



recommended working pressure
150-500KPa
maximum hot water temperature
75 degrees