

ASSEMBLY DIAGRAM Version 2.0

KLON BED


BF-B-KLON-KS&D&Q

IMPORTANT NOTE:


*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFCE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

*KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

*DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.

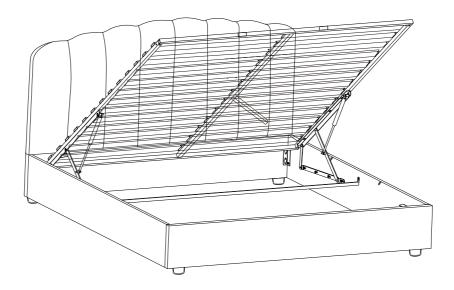


Parts List

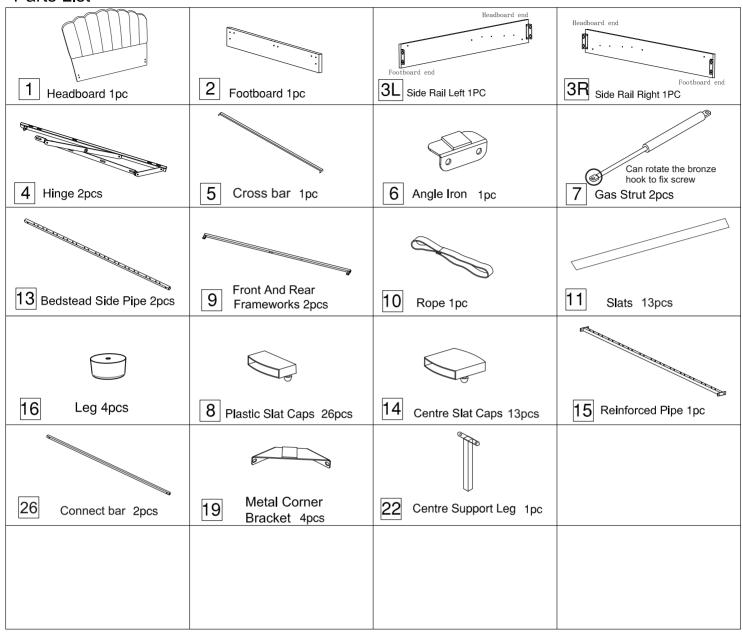

Parts 16_😁 ø9 16 🕾 19 19 16 3R 2 **16 ⊕**

Fittings

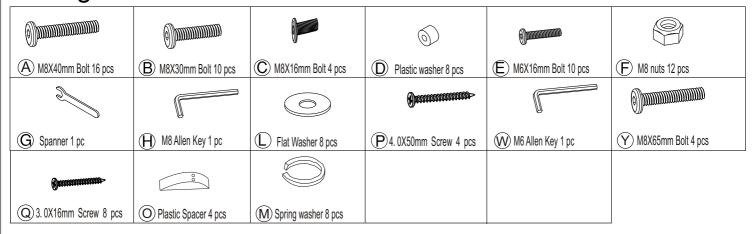


Please refer to the instruction words before installing it.







Attach the bed leg (16) to the headboard (1) and footboard (2) with screws (P), then attach the Angle iron (6) to the footboard (2) with the M8 bolt (B).

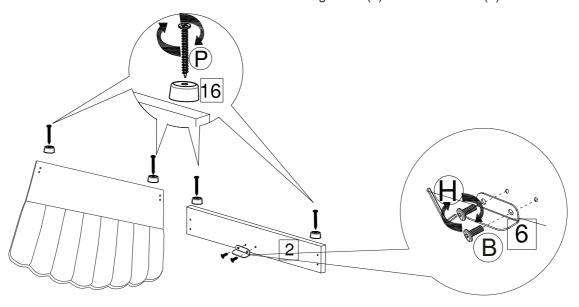


Step 2:

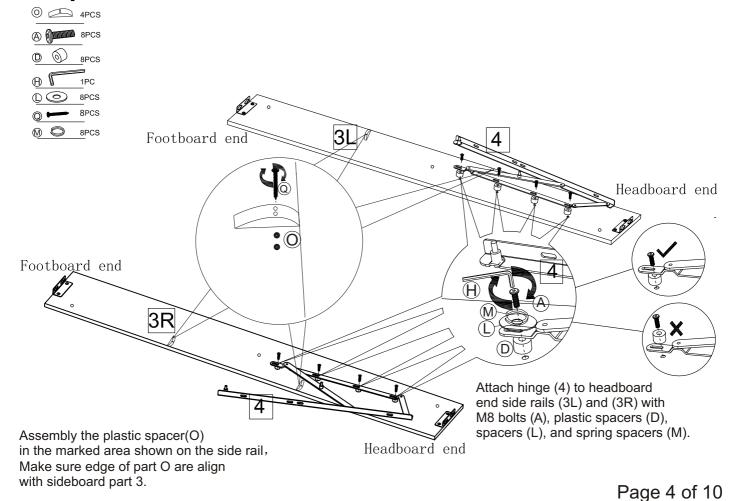

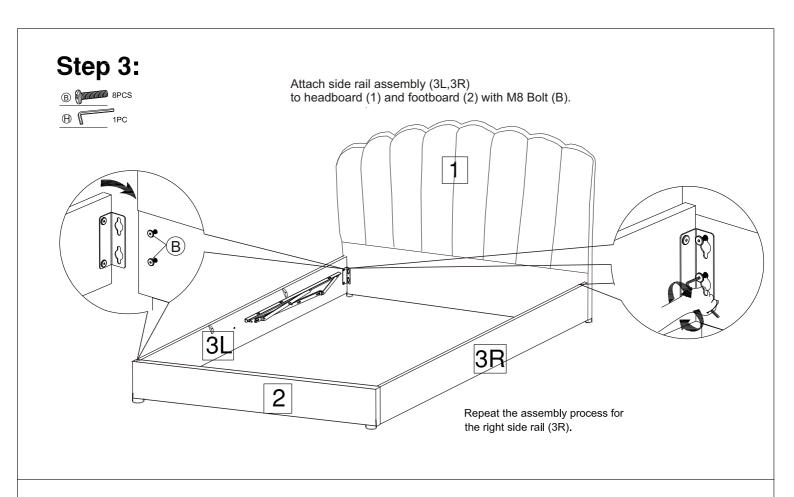


Ensure that the entire bed frame assembly is a regular rectangle as shown below.

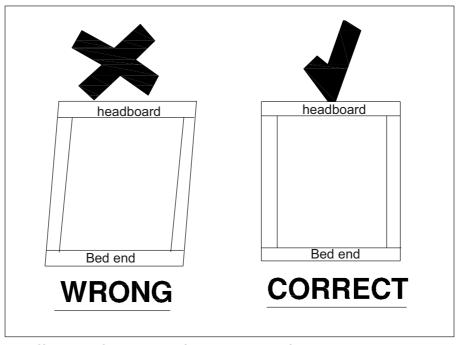


* gas lift mechanism will be affected if the bed frame is out of shape.


Step 4:




Connect metal corner bracket (19) to side rail and Footboard&Headboard with M6 bolts (E).

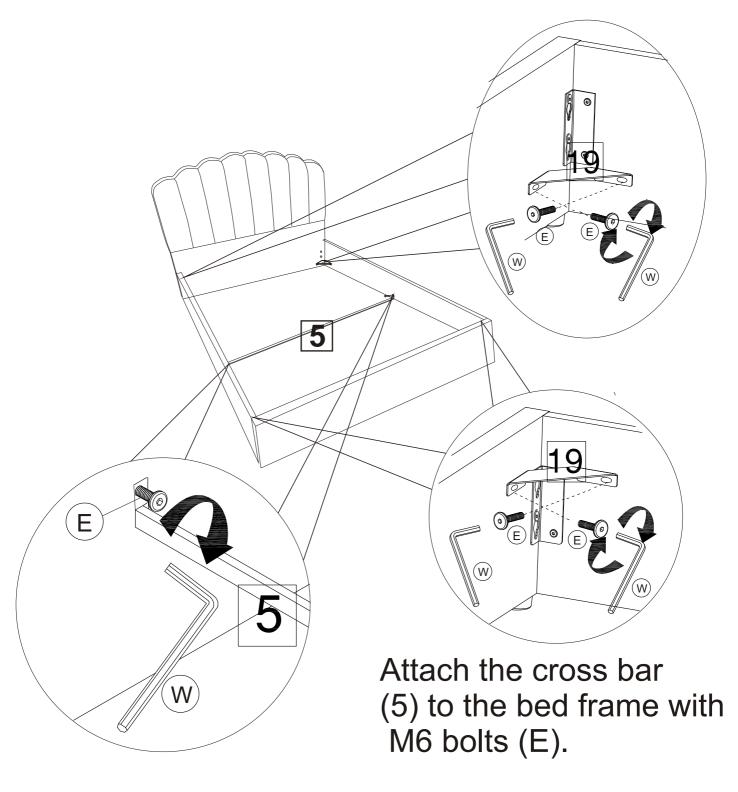

Step 5:

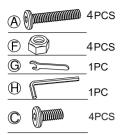


The bottom view ensures that the holes in the dashed box are aligned. Ensure that the holes are aligned when joining 13 and 9.

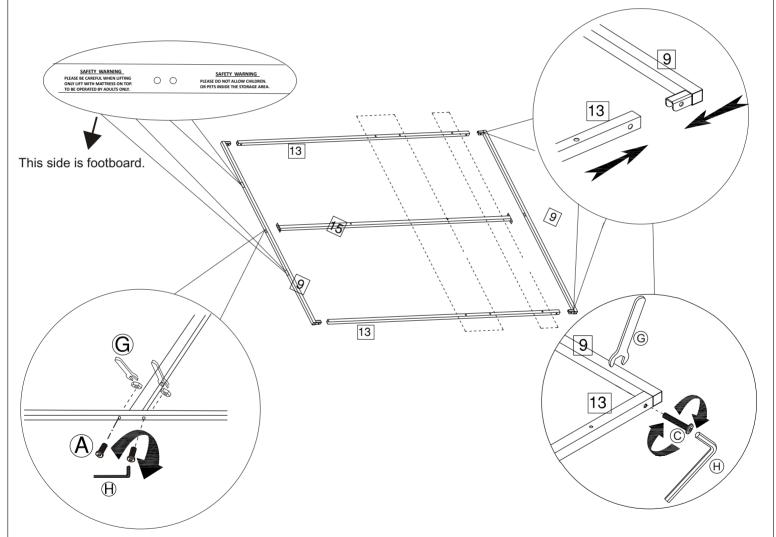


Assemble the interior framework (15 and 9) as shown with M8 bolts (A).

Assemble the interior framework (13 and 9) as shown with M8 bolts (C).

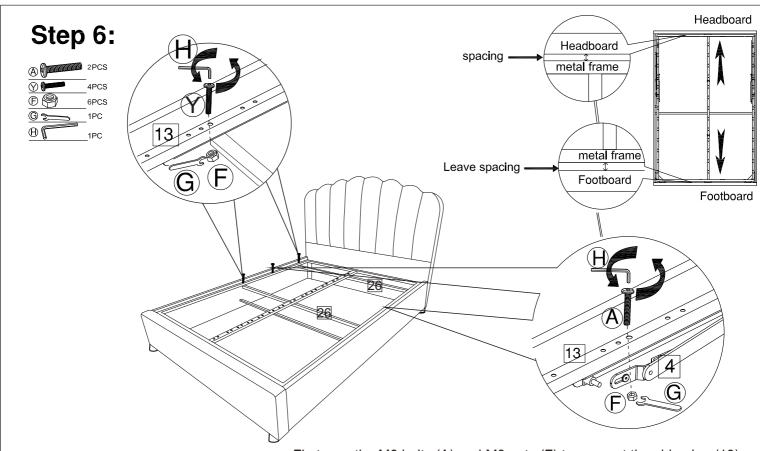

Attach the connect bar (26) to the side pipe (13) with M8 bolts (Y) and M8 nuts(F) as shown.

First, use the M8 bolts (A) and M8 nuts (F) to connect the side pipe (13) to the hinge (4). At this stage, do not fully tighten the M8 bolts (A) to allow for some adjustment between the headboard, footboard and metal frames. There should be some spacing between the headboard, footboard and the metal frames. Once every part is aligned, fully tighten all M8 bolts (A).

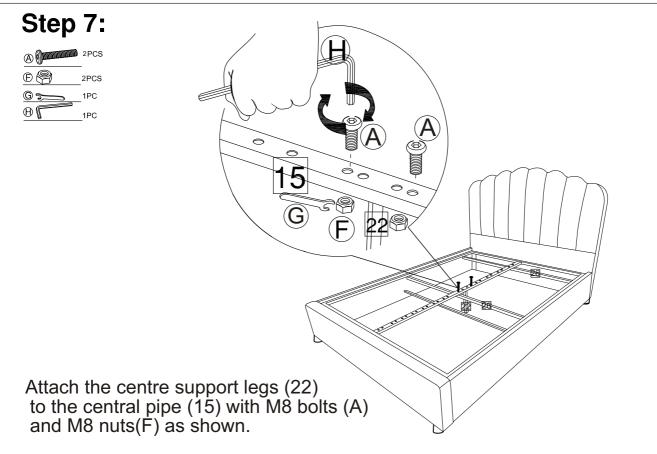


Step 8:




Tie the rope (10) to the interior frame at the central pipe as shown.

Loosen the screw on the bracket, then attach the piston (7) to the hinge (4) with screw driver.




7 Gas Strut 2pcs

LIFTING THE BED FRAME

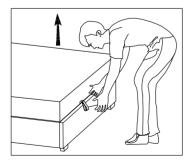

Pull the rope with both hands to lift the bed frame.

Please have your mattress on the bed frame which will help you easily pull and press the metal base.

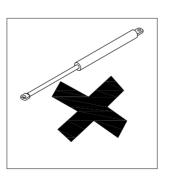

Do not test gas struts by hands, please have them assembled to the metal frame then pull and press the metal base.

LOWERING THE BED FRAME



To lower the bed frame, press it down with both hands as shown.

Step 9: Attach the plastic slat caps (8) to each slat (11) at the side. 26PCS Then press down the caps into the corresponding holes on the side pipes (13)as shown. 15 [11] Attach the plastic slat cap (14) to the side of each slat (11). Then press the cover into the corresponding hole of the center tube (15). 13